PALOMAT

Valid from 01.01.2022

Gate for safety frame for 15 pallets Article no.: 160xxx

The gate is a part of the safety frame and is installed for added safety. The PALOMAT® can only be operated when the gate is closed and locked with the gate safety switch. The gate covers the right front from the top of the second pallet at floor level to the top of the safety frame. The gate is the same type as the one on the 25-pallet magazine.





Maximum indicator Article no.: 16050x

A Sick sensor that detects when the pallet stack is full. If the PALOMAT® needs to stop at 15 pallets, a maximum indicator can be installed on the safety frame or on a bar. When the maximum indicator is actuated, ex. at 15 pallets, the stack is automatically put down on the floor and ready for pick-up. This operation can also be manually performed from the touch panel.



Signal tower incl. maximum indicator Article no.: 160507

A signal tower including a Sick sensor that detects when the pallet stack is full. If the PALOMAT® needs to stop ex. at 15 pallets, the signal tower with a maximum indicator can be mounted on the safety frame or on a bar. When the maximum indicator is actuated, ex. at 15 pallets, the lamp lights and the stack is automatically put down on the floor.



PALOMAT

Valid from 01.01.2022

Forklift truck protection (H:300 x W:310) Article no.: 160533

The forklift truck protection in 10 mm steel (H:300 x W:310) is offered as added protection of the PALOMAT®. The fork-lift truck protection are supplied as a pair and bolted into the floor in front of the PALOMAT®. This option is used especially in settings where pallets are handled by forklift trucks.





Forklift truck protection (H:1.000 x W:250) Article no.: 160532

The forklift truck protection in 10 mm steel (H:1.000 x W:250) is offered as added protection of the PALOMAT®. The forklift truck protection are supplied as a pair and bolted into the floor in front of the PALOMAT®. This option is used especially in settings where pallets are handled by forklift trucks.



Forklift truck protection (H:300 x W:250) Article no.: 160501

The forklift truck protection in 10 mm steel (H:300 x W:250) is offered as added protection of the PALOMAT®. The forklift truck protection are supplied as a pair and bolted into the floor in front of the PALOMAT®. This option is used especially in settings where pallets are handled by forklift trucks.



PALOMAT

Valid from 01.01.2022

Pallet handling in cold environments down to -25°C

Article no.: 160xxx

(Only Greenline 15 pallets/500 kg.)

The PALOMAT® can be modified with other actuators to enable pallet handling in cold environments down to -25°C.





Stop blocks Article no.: 160502

The stop blocks are a perfect option when the PALOMAT® needs to handle pallets where the runners at the bottom are crosswise to the hand pallet truck. When pulling out the hand pallet truck from the PALOMAT®, the two stop blocks hold the pallet in place, keeping it in the magazine. The stop blocks are installed at the front of the PALOMAT®, one on each side next to the front sensors.



Shut Off Valve Article no.: 160506

(Only air models)

The shut off valve enables disconnection from the air supply directly on the machine. The shut off valve can be locked, ex. when servicing the machine. This is an advantage and a safety feature for maintenance of the PALOMAT® unit. The shut off valve is installed directly on the filter regulator.



PALOMAT

Valid from 01.01.2022

Switch disconnector Article no.: 160504

The switch disconnector enables disconnection from the main supply right on the machine. The switch disconnector can be locked, ex. when servicing the machine. This is an advantage and a safety feature for maintenance of the PALOMAT® unit. The switch disconnector is positioned under the main supply.





Greenline Service Kit Article no.: 160550

Our service kit contain the necessary spare parts + tools, for PALOMAT® Greenline. In here, you always have the most important spare parts gathered in one place - ready for you to conduct professional service visits when you are on the road.



Flexomatic Service Kit Article no.: 160551

Our service kit contain the necessary spare parts + tools, for PALOMAT® Flexomatic. In here, you always have the most important spare parts gathered in one place - ready for you to conduct professional service visits when you are on the road.

